



563# O 用
DY-1 φ36



780# O 用
AN-7 φ27×18



780A# O 用
BR27A φ27×33



784# O 用
BR34A φ33.5



782# O 用
AK2016 φ33.5



P803#
DA482A10 φ35



P2580#
P235801B000G01
φ37.5



609# M 用
LHB-005B



609A# M 用
LHB-007B



607# M 用
LHB-006B



P630#
MTD150 φ33



P921# O 用
MTD272
32.5×32.5×17



533# O 用
XF-1
32.6×32.6



554# S 用
M Type




549# S 用
D Type φ36.3



6098# M 用
LHB-051A




608# M 用
LHB-008B

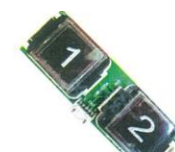

608A# M 用
LHB-052A



552A# M 用
J-M5112

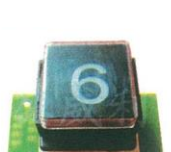

553# M 用
D51.31AG01



549A# S 用
φ28.4
DS-1 Type




P2578# S 用
φ36.3
300PD Type




554E# S 用
M Type
Buzzer



554R# S 用
M-Type
Alarm bell

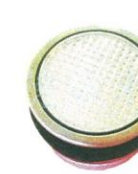

549L# S 用
D-Type
emergency light

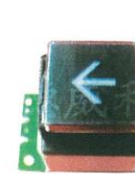

553A# M 用
J-M5497-01



779# H 用
SL-TC 44×35



779A# H 用
DL-P02 41×36




661# H 用
RL1-MA 41×28



661A# H 用
DA411 MTD411
39.3×29.3



P684#
A4J10778 A7 φ33
Emergency-Light-Button

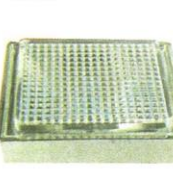

P2579#
A4J10778 A7
39×33



548#
32.6×32.6




548A#
36.8×36.8



P1074#
A4J13426A3
47×36



779Y# H 用
AL-POE φ35

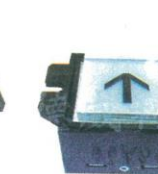

P2380# H 用
AL-POS 36×36



710E#
PB-12 33×33




710F#
PB-10A 34×27



710M#
KA141 40×30



769# M 用
MTD160 31×31

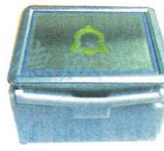

769A# M 用
DA182 MTD182
38.5×32.5



769C# M 用
DA210G01 φ32.5



769A# M 用
BA182 MTD182
39×33




P209# M 用
DA511G01 φ33




710N#
KA31G 33×33



7100#
KA142 φ36.5

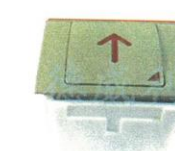

P629#
MTD126 36.5×33

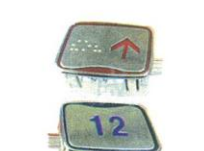

LG01#
AK-25 40×30×17



710XA# F 用
HSA6000A φ38